

Battery Maintenance

How To Care for Your Lawn Equipment Battery

Get the most out of your lawn equipment batteries



Battery Care

1. Proper Charging

Use the Right Charger: Always use the charger that came with your equipment.
Unplug When Fully Charged: Avoid overcharging by unplugging the battery when it's done.
Charge Before It's Completely Dead: Don't let the battery drain all the way before recharging.

2. Storage Tips

Keep Cool and Dry: Store batteries in a cool, dry place, away from direct sunlight.

Partial Charge for Long Storage: If storing for a while, charge the battery to about 50%.

Avoid Extreme Temperatures: Don't leave batteries in very hot or cold places.

3. Regular Maintenance

Clean Contacts: Wipe the battery contacts with a dry cloth to keep them clean. Check for Damage: Look for any cracks or leaks, and replace the battery if needed.

4. Using Practices

Avoid Fully Draining: Try not to let the battery run all the way down. Remove Battery When Not in Use: Remove the battery from the equipment when not in use.

*These tips are not intended to replace the instructions manaul for your equipment and batteries.

Always follow the manufatureres instructions.